

# FE060-45C-EM

FlexPro® Series

**Product Status: Reserved** 

## **SPECIFICATIONS**

Current Continuous

DC Supply Voltage

Network Communication

45 A

10 - 55 VDC

EtherCAT



The **FE060-45C-EM** is a FlexPro® series servo drive with IMPACT<sup>TM</sup> architecture.

The **FE060-45C-EM** offers full tuning control of all servo loops and is designed to drive brushed and brushless servo motors, and closed loop stepper motors. The drive accepts a variety of external command signals, or can use the built-in Motion Engine, an internal motion controller used with Sequencing and Indexing commands. Programmable digital and analog I/O are included to enhance interfacing with external controllers and devices.

The **FE060-45C-EM** features an EtherCAT® interface for network communication using CANopen over EtherCAT (CoE) and USB connectivity for drive configuration and setup. All drive and motor parameters are stored in non-volatile memory.

IMPACT<sup>TM</sup> (Integrated Motion Platform And Control Technology combines exceptional processing capability and high-current components to create powerful, compact, feature-loaded servo solutions. IMPACT<sup>TM</sup> is used in all FlexPro<sup>®</sup> drives and is available in custom products as well.


#### **FEATURES**

- CoE Based on DSP-402 Device Profile for Drives and Motion Control
- Synchronization using Distributed Clocks
- Position Cycle Times down to 100μs
- Four Quadrant Regenerative Operation
- Programmable Gain Settings
- PIDF Velocity Loop

- Compact Size, High Power Density
- On-the-Fly Mode Switching
- On-the-Fly Gain Set Switching
- Dedicated Safe Torque Off (STO) Inputs
- Space Vector Modulation (SVM) Technology

Feedback Supported	• Inclotticitial Encoder	Motors Supported	<ul><li> Three Phase</li><li> Single Phase</li><li> Stepper</li></ul>	Modes of Operation	<ul> <li>Profile Modes</li> <li>Cyclic Synchronous Modes</li> <li>Current</li> <li>Velocity</li> <li>Position</li> </ul>
Command Sources	• Indexing	Inputs / Outputs	<ul> <li>4 Programmable Digital Inputs</li> <li>3 Programmable Digital Outputs</li> <li>1 Programmable Analog Input</li> </ul>	Agency Approvals	<ul><li>RoHS</li><li>UL</li><li>CE</li><li>TUV Rheinland (STO)</li></ul>



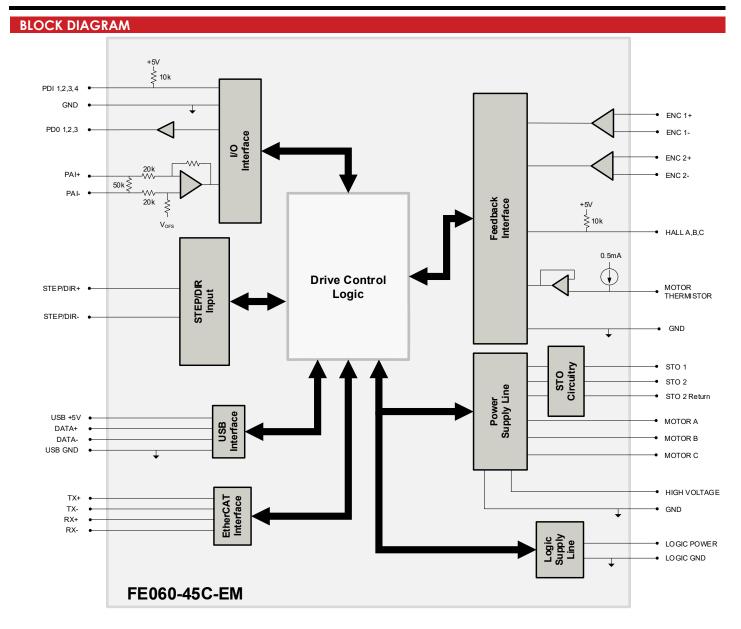

## **INFORMATION ON APPROVALS AND COMPLIANCES**







The RoHS Directive restricts the use of certain substances including lead, mercury, cadmium, hexavalent chromium and halogenated flame retardants PBB and PBDE in electronic equipment.

US and Canadian safety compliance with UL/IEC 61800-5-1, the industrial standard for adjustable speed electrical power drive systems. UL registered under file number E140173. Note that machine components compliant with UL are considered UL registered as opposed to UL listed as would be the case for commercial products.

LVD requirements of Directive 2014/35/EU (specifically, EN 60204-1:2019, a Low Voltage Directive to protect users from electrical shock).



SPECIFICATIONS		
	Electric	al Specifications
Description	Units	Value
Nominal DC Supply Input Range	VDC	12 – 48
DC Supply Input Range	VDC	10 – 55
DC Supply Undervoltage	VDC	8
DC Supply Overvoltage	VDC	58
Logic Supply Input Range (required)	VDC	10 – 55
Safe Torque Off Voltage (Default)	VDC	5
Minimum Required External Bus Capacitance	μF	500
Maximum Continuous Current Output <sup>1</sup>	A (Arms)	45 (45)
Efficiency at Rated Power	%	99
Maximum Continuous Output Power	W	2351
Maximum Power Dissipation at Rated Power	W	124
Minimum Load Inductance (line-to-line) <sup>2</sup>	μН	150 (@ 48VDC supply); 75 (@24VDC supply); 40 (@12VDC supply)
Switching Frequency	kHz	20
Maximum Output PWM Duty Cycle	%	83
Maximon Colport Min Boly Gyele		Specifications
Description	Units	Value
Communication Interfaces <sup>3</sup>	-	EtherCAT® (USB for configuration)
Command Sources		±10 V Analog, Over the Network, Sequencing, Indexing, Jogging, Step
Command Sources	-	& Direction, Encoder Following
Feedback Supported		Absolute Encoder (BiSS C-Mode, EnDat 2.2), Hall Sensors, Incremental
гееараск зорронеа	-	Encoder, Auxiliary Incremental Encoder, Tachometer (±10V)
Commutation Methods	-	Sinusoidal, Trapezoidal
Modes of Operation	-	Profile Modes, Cyclic Synchronous Modes, Current, Velocity, Position
Motors Supported⁴		Three Phase (Brushless Servo), Single Phase (Brushed Servo, Voice Coil,
		Inductive Load), Stepper (2- or 3-Phase Closed Loop)
		40+ Configurable Functions, Over Current, Over Temperature (Drive &
Hardware Protection	-	Motor), Over Voltage, Short Circuit (Phase-Phase & Phase-Ground),
		Under Voltage
Programmable Digital Inputs/Outputs	-	4/3
Programmable Analog Inputs/Outputs	-	1/0
Primary I/O Logic Level	-	5 VDC, not isolated
Current Loop Sample Time	μS	50
Velocity Loop Sample Time	μS	100
Position Loop Sample Time	μS	100
Maximum Encoder Frequency	MHz	20 (5 pre-quadrature)
5		cal Specifications
Description (U.) W. D.	Units	Value
Size (H x W x D)	mm (in)	38.1 x 25.4 x 16.0 (1.50 x 1.00 x 0.61)
Weight	g (oz)	22.7 (0.8)
Ambient Operating Temperature Range <sup>5</sup>	°C (°F)	0 - 65 (32 - 149)
Storage Temperature Range	°C (°F)	-40 – 85 (-40 – 185)
Relative Humidity	-	0-95%, non-condensing
Form Factor	-	PCB Mounted
P1 SIGNAL CONNECTOR*	-	80-pin 0.4mm spaced connector
TERMINAL PINS	-	26x Terminal Pins

### Notes

- Continuous A<sub>rms</sub> value attainable when RMS Charge-Based Limiting is used.
   Lower inductance is acceptable for bus voltages well below maximum. Use external inductance to meet requirements.
- 3. EtherCAT® is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.
- 4. Maximum motor speed for stepper motors is 600 RPM. Consult the hardware installation manual for 2-phase stepper wiring configuration.
- 5. Additional cooling and/or heatsink may be required to achieve rated performance.

## \*Mating Connector Kit

Surface mount board connector for P1 and board spacers can be ordered as a kit using ADVANCED Motion Controls' part number KC-MC1XFE01.



#### **PIN FUNCTIONS** P1 – Signal Connector Description / Notes GROUND Ground GND GROUND GND Ground PAI-1+ Differential Programmable Analog Input or DATA+ USB 1/0 **USB** Data Channel PAI-1-Reference Signal Input (12-bit Resolution) 6 DATA- USB 1/0 THERMISTOR Motor Thermal Protection 8 GROUND Ground GND I<sup>2</sup>C Data Signals for Addressing, Network 9 GROUND GND 10 SCLA 0 Error LED, and Bridge Status LED, See Differential Data Line for Absolute Encoders 11 ENC 1 DATA+ / A+ 1/0 12 SDAA 1/0 Hardware Manual for more info. (BiSS: SLO+/-) or Differential Incremental 13 ENC 1 DATA- / A-1/0 14 HALL A 1 Fncoder A Differential Clock Line for Absolute 15 ENC 1 CLK+ / B+ HALL B 1/0 16 Single-ended Commutation Sensor Inputs 1 Encoders (BiSS: MA+/-) or Differential 17 ENC 1 CLK- / B-1/0 18 HALL C Incremental Encoder B. GND 20 GROUND GND 19 GROUND 21 ENC 1 REF+ / I+ Differential Reference Mark for Absolute 22 ENC 2 A+ 1 Encoders (Leave open for BiSS) or Differential Incremental Encoder A. 23 ENC 1 REF- / I-Differential Incremental Encoder Index. 1 24 ENC 2 A-1 25 RESERVED Reserved. Do not connect. 26 ENC 2 B+ Differential Incremental Encoder B 27 RESERVED Reserved. Do not connect. ENC 2 B-28 RESERVED Reserved. Do not connect. Differential Incremental Encoder Index 31 PDI-1 Programmable Digital Input 32 ENC 2 I-Programmable Digital Output (TTL/8mA) 33 PDI-2 Programmable Digital Input 34 PDO-1 0 PDO-2 35 PDI-3 Programmable Digital Input 36 Programmable Digital Output (TTL/8mA) 0 37 PDI-4 Programmable Digital Input 38 PDO-3 Programmable Digital Output (TTL/8mA) 0 39 GROUND GND 40 GROUND GND TX- OUT 41 TX- IN 42 Transmit Line OUT (100 Base TX) Transmit Line IN (100 Base TX) 43 TX+ IN 44 TX+ OUT 45 RX- IN 46 RX- OUT 0 Receive Line IN (100 Base TX) Receive Line OUT (100 Base TX) 47 RX+ IN 48 RX+ OUT 49 +3V BIAS IN +3V Supply for Transformer/Magnetics Bias 0 +3V BIAS OUT +3V Supply for Transformer/Magnetics Bias 50 Link and Activity Indicator for IN port. Link and Activity Indicator for OUT port. 51 LINK/ACT IN Function based on protocol specification. 1/0 52 LINK/ACT OUT Function based on protocol specification. 1/0 See Hardware Information below See Hardware Information below Run State Indicator for Network. Function 53 STATUS based on protocol specification. See I/O 54 RESERVED Reserved. Do not connect. Hardware Information below. 55 RESERVED Reserved. Do not connect. 56 RESERVED Reserved. Do not connect. 57 RESERVED Reserved. Do not connect. 58 RESERVED Reserved. Do not connect. 59 GROUND Ground GND 60 GROUND Ground GND 61 RESERVED Reserved. Do not connect. RESERVED Reserved. Do not connect. 62 63 RESERVED Reserved. Do not connect. RESERVED Reserved. Do not connect. 64 Reserved. Do not connect 65 RESERVED RESERVED Reserved. Do not connect. 66 67 RESERVED Reserved. Do not connect 68 STEP Step Input. 69 RESERVED Reserved. Do not connect 70 DIR Direction Input. 71 RESERVED Reserved. Do not connect. 72 RESERVED Reserved. Do not connect. +5VDC unprotected supply for local logic RESERVED 73 +5V 0 74 Reserved. Do not connect. (See Note 1) +5V USFR +5VDC User Supply for feedback or 76 +3V3 +3.3VDC supply for local logic signals 75 +5V USER (100 mA max) external devices (See Note 1) 0 78 +3V3 0 79 GROUND Ground GND 80 GROUND Ground GND +3V3 76 DATA- USB 80-pin, 0.4mm spaced **Connector Information** DATA+ USB +3V3 78 -H connector GROUND 80 GROUND Mating Connector Details PANASONIC: P/N AXT380224 άλλησησησησιών **Mating Connector** No GROUND 79 -- 1 GROUND ded with Drive +5V USFR 77 -- 3 PAI-1+ +5V USER 75 - 5 PAI-1-


Notes

1. Total current through pins P1-73/75/77 should not exceed 300mA, while no single pin should be loaded more than 150mA.



## **TERMINAL PIN LOCATIONS**

The 26 Terminal Pins provide connection to the high power drive signals. Terminal Pins must be soldered to an interface board.

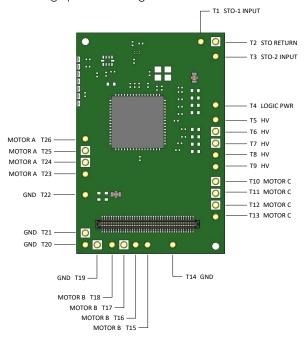

Pin	Name	Description / Notes	I/O
T1	STO-1 INPUT	Safe Torque Off – Input 1	I
T2	STO RETURN	Safe Torque Off Return	STORET
T3	STO-2 INPUT	Safe Torque Off – Input 2	I
T4	LOGIC PWR	Logic Supply Input (10 – 55VDC) (required)	I
T5	HV		1
T6	HV		I
T7	HV	DC Supply Input (10-55VDC). Minimum 500μF external capacitance required between HV and POWER GND.	I
T8	HV		
Т9	HV		
T10	MOTOR C		0
T11	MOTOR C	Motor Phase C. All provided motor phase output pins must be used.	0
T12	MOTOR C		0
T13	MOTOR C		
T14	POWER GND	Ground.	GND
T15	MOTOR B		0
T16	MOTOR B	Marter Dhoras D. All provided marter share quitaut pine must be used	0
T17	MOTOR B	Motor Phase B. All provided motor phase output pins must be used.	
T18	MOTOR B		0
T19	POWER GND		GND
T20	POWER GND	Ground.	GND
T21	POWER GND	Glouria.	GND
T22	POWER GND		GND
T23	MOTOR A		0
T24	MOTOR A	Motor Phase A. All provided motor phase output pins must be used.	
T25	MOTOR A		
T26	MOTOR A		0

#### **Terminal Pin Details**

#### Safe Torque Off (STO) Inputs

The Safe Torque Off (STO) inputs are dedicated +5VDC sinking single-ended inputs. For applications not using STO functionality, disabling of the STO feature is required for proper drive operation. STO may be disabled by following the STO Disable wiring instructions as given in the hardware installation manual. Consult the hardware installation manual for more information.




## HARDWARE INFORMATION

#### **LED Functionality**

LINK/ACT IN (P1-51); LINK/ACT OUT (P1-52); STATUS (P1-53);

The LINK/ACT IN, LINK/ACT OUT, and STATUS pins serve as EtherCAT network indicators. On a standard RJ-45 connector used with EtherCAT network topology, the typical EtherCAT network indicator LED locations are as shown in the below diagrams. Note that the drive features signals for connection to LEDs on an RJ-45 connector, but the connector itself is not included on the drive. The Development Card assembly FD060-25-EM features a built-in RJ-45 connector with LEDs for this purpose.




LINK/ACT IN and LINK/ACT OUT are used to drive the corresponding LINK IN and LINK OUT LEDs on a typical RJ-45 connector. The STATUS pin is used to drive the Status LED. The ERROR LED is driven by the I<sup>2</sup>C Data signals (P1-10/12). Consult the hardware installation manual for recommended wiring connections. The LED Function Protocol tables below describe typical LED functionality.

	LINK/ACT LEDS		
LED State	Descr	iption	
Green – On	Valid Link - No Activity		
Green – Flickering	Valid Link - Network Activity		
Off	Invalid Link		
	STATUS LED		
LED State	Description		
Green – On	The device is in the state OPERATIONAL		
Green – Blinking (2.5Hz – 200ms on and 200ms off)	The device is in the state PRE-OPERATIONAL		
Green – Single Flash (200ms flash followed by 1000ms off)	The device is in state SAFE-OPERATIONAL		
Green – Flickering (10Hz – 50ms on and 50ms off)	The device is booting and has not yet entered the INIT state, or The device is in state BOOTSTRAP, or Firmware download operation in progress		
Off	The device is in state INIT		
	ERROR LED		
LED State	Description	Example	
Red – On	A PDI Watchdog timeout has occurred.	Application controller is not responding anymore.	
Red – Blinking (2.5Hz – 200ms on and 200ms off)	General Configuration Error.	State change commanded by master is impossible due to register or object settings.	
Red – Flickering (10Hz – 50ms on and 50ms off)	Booting Error was detected. INIT state reached, but parameter "Change" in the AL status register is set to	Checksum Error in Flash Memory.	

LED State	Description	Example
Red – On	A PDI Watchdog timeout has occurred.	Application controller is not responding anymore.
Red – Blinking (2.5Hz – 200ms on and 200ms off)	General Configuration Error.	State change commanded by master is impossible due to register or object settings.
Red – Flickering (10Hz – 50ms on and 50ms off)	Booting Error was detected. INIT state reached, but parameter "Change" in the AL status register is set to 0x01:change/error	Checksum Error in Flash Memory.
Red – Single Flash (200ms flash followed by 1000ms off)	The slave device application has changed the EtherCAT state autonomously: Parameter "Change" in the AL status register is set to 0x01:change/error.	Synchronization error; device enters SAFE- OPERATIONAL automatically
Red – Double Flash (Two 200ms flashes separated by 200ms off, followed by 1000ms off)	An application Watchdog timeout has occurred.	Sync Manager Watchdog timeout.



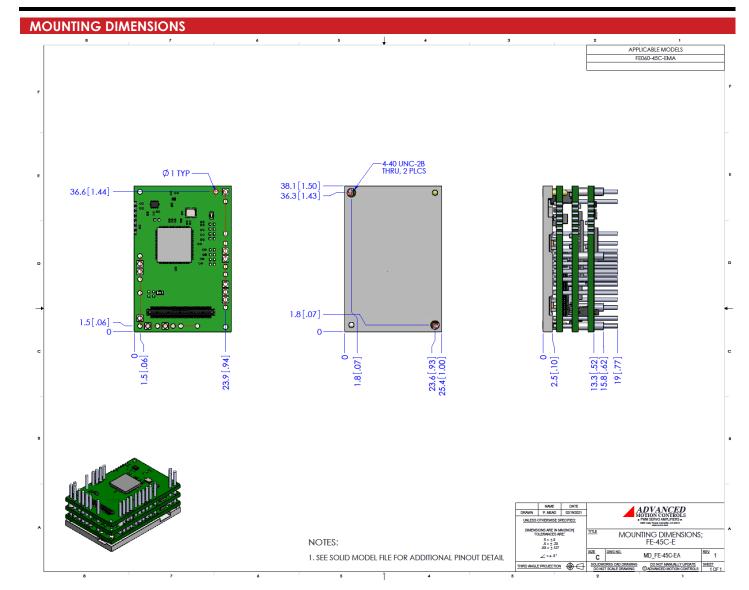



#### PART NUMBERING AND CUSTOMIZATION INFORMATION E 060-45C-E M F **Drive Series Feedback** FlexPro® Multi Encoder (BiSS, 5V Incremental) **Environment Network Communication** EXtended Environment **E**therCAT E С **C**ANopen Form Factor R RS485/232 FlexPro® Embedded **Continuous Current** FlexPro® E (W/ Development board) 5 **5**A FlexPro® Machine Mount 10 10A Maximum DC Bus Voltage **25**A 25 45C 45A (continuous only, no peak) 060 60 VDC 50 50 A 100 100 VDC 60C 60A (continuous only, no peak)

ADVANCED Motion Controls also has the capability to promptly develop and deliver specified products for OEMs with volume requests. Our Applications and Engineering Departments will work closely with your design team through all stages of development in order to provide the best servo drive solution for your system. Equipped with on-site manufacturing for quick-turn customs capabilities, ADVANCED Motion Controls utilizes our years of engineering and manufacturing expertise to decrease your costs and time-to-market while increasing system quality and reliability.

#### **Examples of Customized Products**

- Optimized Footprint
- Private Label Software
- ▲ OEM Specified Connectors
- No Outer Case
- ✓ Increased Current Resolution
- ✓ Increased Temperature Range
- Custom Control Interface
- Integrated System I/O

- Tailored Project File
- ✓ Silkscreen Brandina
- ▲ Optimized Base Plate
- Increased Current Limits
- Increased Voltage Range
- Conformal Coating
- ▲ Multi-Axis Configurations
- Reduced Profile Size and Weight

Feel free to contact us for further information and details!

#### **Available Accessories**

ADVANCED Motion Controls offers a variety of accessories designed to facilitate drive integration into a servo system. Visit <a href="https://www.g-m-c.com">www.g-m-c.com</a> to see which accessories will assist with your application design and implementation.

#### **Development Board**

The FE060-45C-EM is offered in a pre-soldered development board assembly to provide easy connections to motor, power, and signal functions. The development board assembly can be ordered as model number **FD060-45C-EM**.



All specifications in this document are subject to change without written notice. Actual product may differ from pictures provided in this document.